

Connecting the SUPER CUB(AA01) / LITTLE CUB(AA01) ECU to the ENIGMA Bluetooth version

This Manual is SUPERCUB (AA01) / LITTLE CUB(AA01) only.

For the AA04 SUPERCUB50, please refer to the dedicated ENIGMA manual.

Installation should be done in a safe place.

A basic knowledge of the is SUPERCUB (AA01) / LITTLE CUB(AA01) maintenance is necessary.

The normal vehicle has an ECU inside the side cover on the lower right side. Remove the right side cover according to the manual. The ECU is rubber-mounted when the side cover is removed.

Make an **interrupt connection** from the ENIGMA wiring to the wiring on the coupler side.


(An interrupt connection can made without cutting but by making a branch in the normal connection.)

Do not use an electro tap on the interrupt wiring connection. It causes many connection issues that are problematic to the operation of the ENIGMA. (Use solder or the like for improved reliability.)

If you use the RTF type, remove the coupler which is connected to the ECU, please connect the coupler that has come out from ENIGMA RTF to the ECU and the vehicle body side. Please make sure that the lock sound is a "click".

The wires from the Enigma will be the fundamentally the same, or similar to that of the wires it will connect to from the bike. Please carefully follow the diagram below when making the connection. There are a total of 8 wires.

- The purple cable is a service cable and is not to be connected to the ECU.
- By cutting the No.16 Pin (Pink / Green) wire of ECU (Injecttor), the bike vehicle body side wiring from the ENIGMA connect the Pink / Green wire. Connect the Pink wire the ECU side.
- In order to prevent the reporting water from entering into the ENIGMA inside from the base of the wiring from the ENIGMA, it is recommended that you install in the lower wiring side in the vertical the ENIGMA.

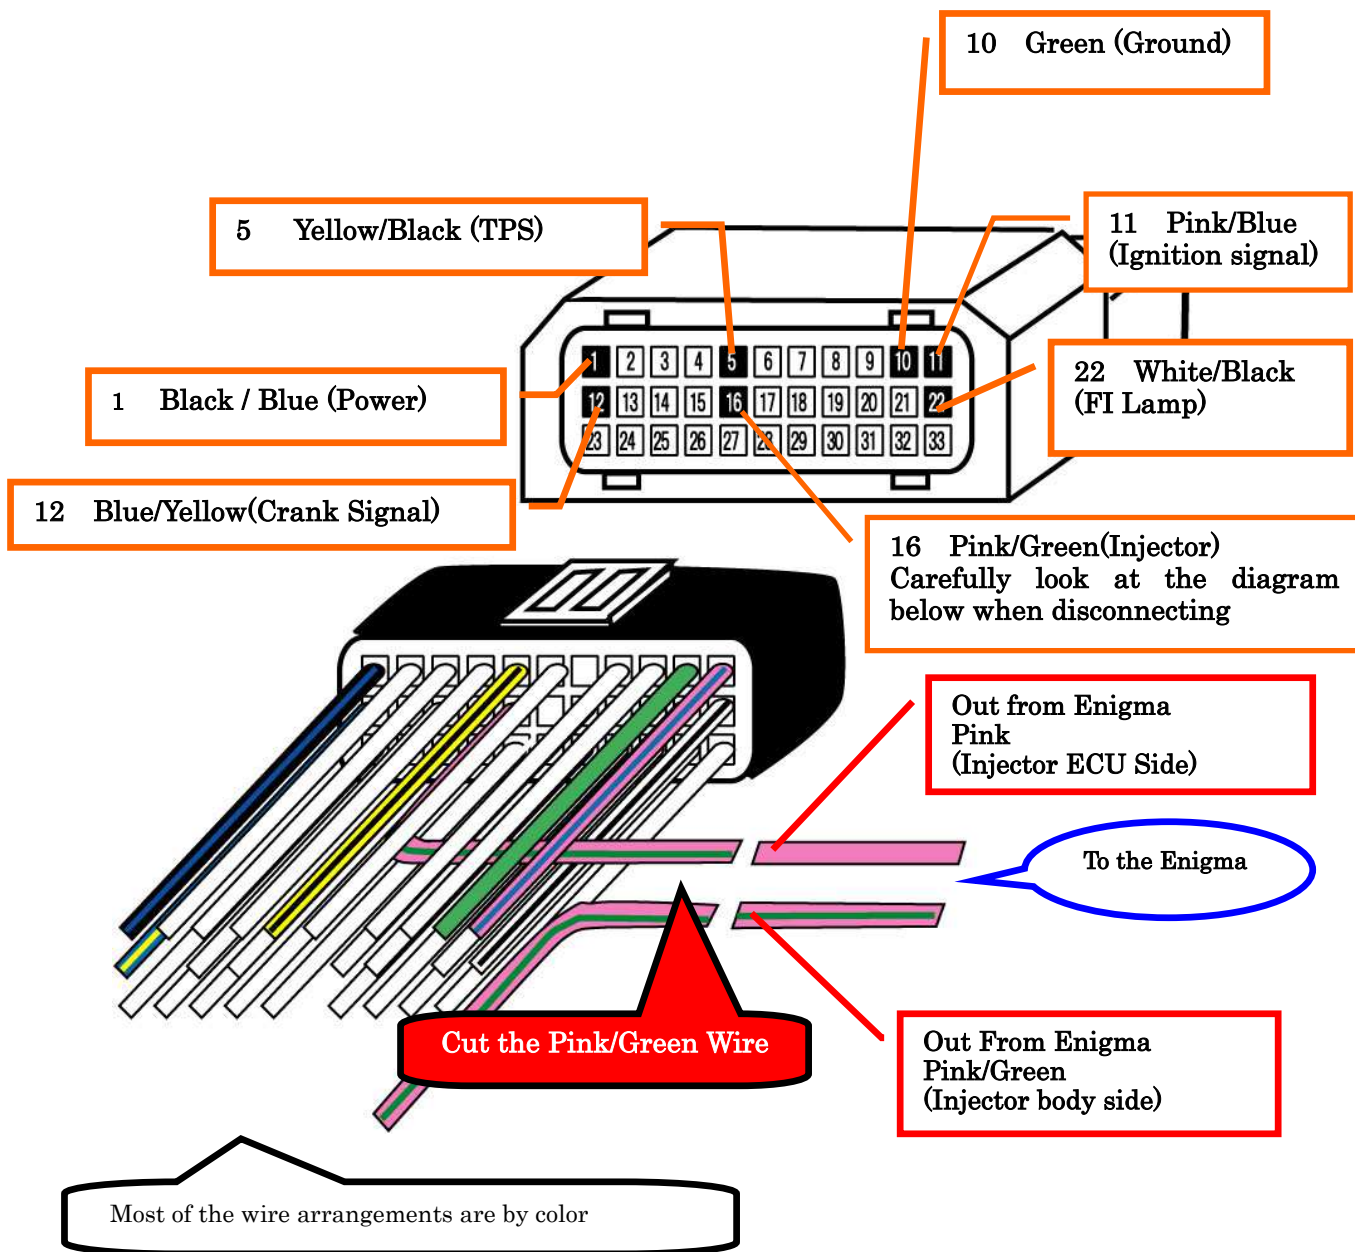

• ECU terminal connected 7wires 1, 5, 10, 11, 12, 16, 22. Please confirm the picture.

• The purple line is the service output line. The ENIGMA will output 5V each crank rotation. Most commercially available digital tachometers are supported. Exact values will be displayed if these cables are connected. They are useful to various applications. Do not short-circuit by taping when there is no need.

• The limiter has not been canceled after the wiring connection is complete. It can be easily canceled by communicating with the Enigma operating software on a smartphone or PC.

• The Enigma operating software can be downloaded free from our website.

<http://www.dilts-japan.com/download.html>